




Cut to Fit Ridge Ventilation

**ABM Panel Profile
with Glue
50' Rolls**

- Glue spots prevent slipping during installation
- Fits under any ridge cap
- Fits any pitch 3:12 - 20:12
- One person roll-out installation
- Won't crack, dent or rust during shipping or installation
- Won't scratch panel finish
- Won't clog from airborne dust
- Prevents insect infiltration
- Prevents snow infiltration
- Provides proven roof ventilation
- Invisible from the curb
- Will not support a flame
- Made in USA
- Made from over 90% recycled fiber; over 30% post-consumer content

Perform Vent Installation Instructions

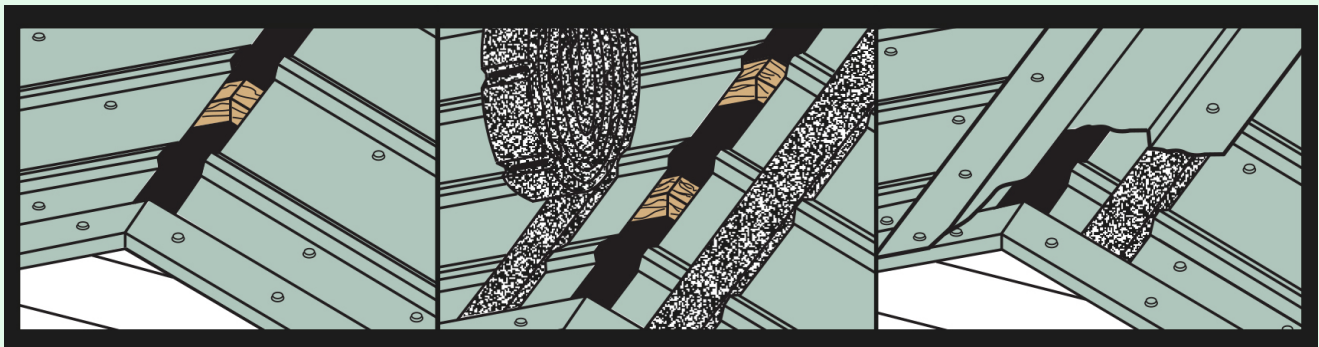

1. Allow a 2" opening at ridge for ventilation. Perform Vent is rolled out along the ridge, gable to gable. Install Perform Vent about 1/2" to 1" up-slope from the edge of the ridge cap.

2. Perform Vent can be cut with scissors or utility knife.

When splicing Perform Vent, make the splice at the center top of the high rib and use caulk or sealant along the splice.

3. Screw through ridge cap into top of each panel rib.



82 Garden Spot Road
Ephrata, PA 17522
717-445-6885
www.abmartin.net